



DIGITAL COMBO



Digital Combo Multi-Purpose Press

Version I-09




Contents

Introduction.....	3
Setup & Suggestions	4
Normal Operation	5
Normal Operating Mode	5
Setting Temperature	5
Setting Time	6
Pre-Press Timer	6
Setting Pressure	7
Digital Pressure Bar Graph	7
Guidelines & Standard Settings	8
ERR Mode.....	9
Over-Temp Alarm.....	9
Using Attachments.....	10
Removing a Heat Platen.....	10
Attaching a heat platen.....	11
Cap Hold-down Device (<i>For Cap Attachment Only</i>)	12
Aligning the Pedestal	12
Optional Forms / Custom Pedestals	12
How to use the Cap Attachment.....	13
How to use the Mug Attachment	13
How to use the Plate Attachment	14
Pressing Ceramic Tile	14
Programmable Presets.....	15
How Presets Work.....	15
Loading a Preset.....	15
Editing/Programming a Preset	16
A Walkthrough Tutorial for using Presets	17
User Menus	18
Entering the user menus & options	18
Fahrenheit / Celsius.....	18
Timer Counter Units	18
Recorded Pressings (User Odometer)	19
Pressure Minimum	19
Pressure Maximum.....	20
Temperature Drop Sense.....	20
Keypad Beeper.....	21
Alarms	21
Finished Warning Beep.....	22
Prepress Timer	22
Prepress Alarms	23
Operator Lockout	23
Parts / Maintenance / Misc.....	24
Interchangeable Tables.....	24
Maintenance	24
Replacement Parts.....	25
Wiring Diagram	26
Troubleshooting	27
Troubleshooting (cont.).....	28
2 Limited Warranty	29


Introduction

Congratulations on your purchase of the DC16 Digital Combo press! This heat press machine has many exciting features, all of which are meant to help make your heat transfer pressing endeavors as successful and easy as possible. Please take the time now to thoroughly read through this manual to become acquainted with them. It will explain some key features, concepts and methods that will save much time and effort in using this press and in your heat pressing applications.

Throughout this manual, many areas and components of this machine will be referred to by specific names. Please refer to the illustrations below in order to become familiar with some of the terminology used in this manual.

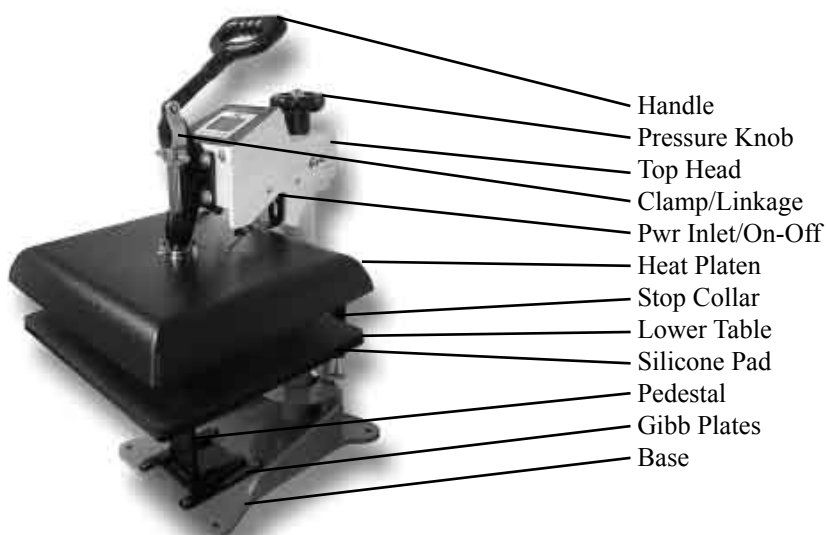

Default Operating Mode of Controller

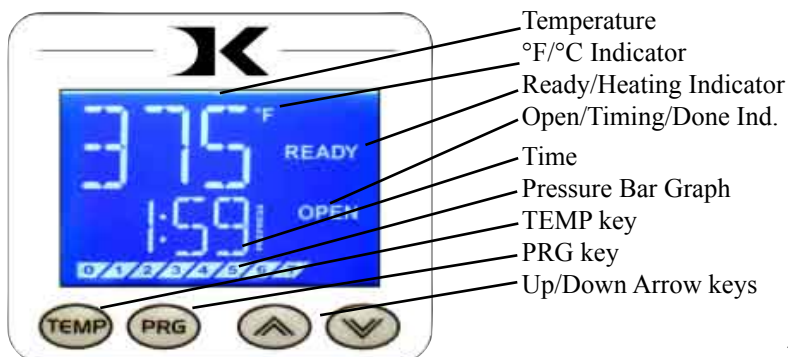

Setup & Suggestions

- Locate the press on a firm, sturdy work surface. It is recommended but not necessary to bolt the press to a workbench using the rear mounting holes on the base frame.
- A stand on lockable casters is available from Geo Knight & Co or your distributor.
- The height of the bench/work space the press is located on would be ideally 25" to 30" high. The higher the press, the more difficult to close/lock.
- Attach the power cord from the rear to the underside of the top head. There is a power inlet under the top head that the modular cord will plug into.
- It is **HIGHLY RECOMMENDED** that the cord be strapped or tied to the back white post of the press, so that the cord is not pulled on and tugged out of the power inlet where it plugs into the press. TEST and make sure the cord travels freely when swinging the press, and that there is no tension or pulling on the inlet socket where the power cord plugs into the head. Make sure the cord can not be pressed by the heater.
- The press should remain in the unclamped OPEN position when not in use. Do not leave the heater block closed on the table when not using, unless transporting.
- The top head should be swung over the pressing table when not in use. Do not leave the platen down on the silicone pad when heating. Always leave the heat platen in the UP position.

Normal Operation

Normal Operating Mode

The normal operating mode of the press will display the current actual Temperature at the top of the screen and the time setting or elapsed time below the temperature.

The right side the screen will indicate the heating status by stating HEATING, READY, both of those words, or none at all, depending on if it is cooling down or heating up to the set temperature. READY is shown only if the current temperature is within 5 degrees of the set point temperature.


The right side of the screen will also indicate the timing status by stating OPEN, TIMING or DONE. The DONE indicator may remain on in some cases until the press is opened back up.

If the pressure feature is enabled, the pressure bar graph will show the last known pressure exerted when the press was closed.

Setting Temperature

From the normal operating mode, simply press the TEMP key to set the temperature.

The flashing 3-digit number is the temperature setting (not the actual current temp). Use the Arrow Keys to set the desired temperature. Hold them down to increase rapidly, press both together to set it to 350°F.

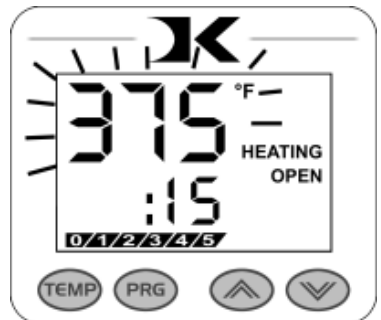

Press TEMP again to lock in the setting.

Setting Time

From the normal operating mode, simply use the Arrow Keys **ONLY** to set the time. Do not touch the PRG key.

Hold down either the Up or Down arrow key for more than 2 seconds and the time will increase rapidly.

Press **BOTH** Arrow Keys and the time will reset to 00 seconds.



Pre-Press Timer

There is a second timer available for use, called the “Pre-Press Timer”. This feature is useful if a multiple-step process is performed.

For example: If a product must be pre-pressed for 5 seconds before a main pressing cycle of 20 seconds, the Prepress timer can be set for 5 secs, and the main timer for 20. When the operator closes the press, the 5-sec time counts down. When the operator opens the press, the time setting switches to 20 seconds.



The word **PREPRESS** will be displayed next to the pre-press time setting when it is active. To set the pre-press time, simply use the Arrow Keys to set the time. If **PREPRESS** is not displayed next to the time, quickly close and then open the press to switch to the prepress time.

To turn **ON** the prepress timer feature, enter the User Options Menus (see page 18) and go to the PPR setting and turn it **ON**. (see page 22)

Setting Pressure

Pressure is set manually using the large black Pressure Adjustment Knob. There is one important rule of thumb when setting pressure: The press **MUST LOCK IN PLACE** when lowering and clamping the press. Do not simply let the platen rest on the pad. A good solid two-handed locking force is recommended when first doing transfers to insure good results. A “Ka-Thunk” click/clamp sound will result when locking the press in place.

- To decrease the pressure, turn the pressure knob to the left, counterclockwise. The top head will rise away from the lower table.
- To increase the pressure, turn the pressure knob to the right, clockwise. The top head will lower toward the pressing table.



Digital Pressure Bar Graph

The Digital Pressure Bar Graph indicates a basic 0-9 scale of pressure exerted. The pressure bar graph resets when the press is closed/locked while timing.



If the pressure adjustment has been changed, or a different thickness item has been placed in the press, the pressure bar graph will not change until the press is closed and locked and the timer is counting.

This bar graph is directly related to the amount of pressure, or resistance, being felt and applied to the bottom table. If a thicker item is placed in the press, and no adjustments are made to the pressure knob, then the amount of pressure clamping down will be greater, and the bar graph will show a higher number. Here are some bar graph guidelines:

A very light pressure slight clamping would be in the 0 to 3 range.
A good medium pressure for most applications would be 4 to 6.
Excessively high pressure for demanding items would be 7-9.

Guidelines & Standard Settings

The following information covers some basic guidelines for pressing, as well as some generic parameters for basic heat transfer applications.

- When pressing shirts, it is often recommended that the shirts be quickly pressed for 2 to 4 seconds before transferring to remove wrinkles and water content.
- When pressing two sides of a garment, pull the garment over the table so that the printed side drapes underneath the table. This will avoid reheating previously transferred designs on opposite sides of garments. It will also avoid any bleed-through of inks on lighter fabrics.
- Avoid laying collars, cuffs, zippers, and other bulky parts of garments on the lower table, as these can adversely affect pressing conditions, and reduce the life of the silicone pad.
- When pressing rigid substrates (plastics, metals, woods, etc.), be sure that any protective films or laminates are removed before heating.
- Always check that the transfer image is face down against the material, to avoid sealing the image against the heat platen instead of the substrate.

Always follow the transfer media suppliers instructions when pressing. The information below is for general reference only, and may not be as accurate as the instructions provided by the transfer media & imprintable substrate supplier.

• Hot Split Supplier Transfers	350-375°F, 8-10 secs
• Puff Transfers	350-375°, 5-7 secs (extra heavy pressure)
• Ink-Jet Transfer Papers	360°, 15-18 secs
• ColorCopy/Laser Transfer Papers	375°, 20-25 secs
• Sublimation Inks (Polyester Fabrics)	400°, 35 secs
• Sublimation Inks (Plastics)	400°, 1 min, 15 secs
• Sublimation Inks (Metals)	400°, 1 min
• Sublimation Inks (Woods)	400°, 1 min, 15 secs
• Sublimation Inks (Ceramics)	400°, 4 min

ERR Mode

During operation of the press, if there is a loss of signal from the temperature sensor wire, the ERR display will appear.

This is a safety feature that will shut off the relay so the press will not overheat aimlessly without a temperature signal.



Once the temperature signal is restored (no longer broken, or plugged back into the control) the press will resume the temperature display, and start heating if necessary. If ERR persists, contact support.

Over-Temp Alarm

If the press heats beyond the set temperature by 40 degrees or greater, the OverTemp alarm will sound.

This is a safety feature that warns the operator of a possible thermal run-away of the press. This means the press relay may be locked in a heating position where it will never stop heating, to a possibly harmful temperature level.



If the OverTemp alarm sounds, set the temperature to a higher value than the current actual temp. Wait 30 seconds and then reset the press to your desired temperature and Watch Carefully. Do not let the press rise to extremely high temps.

If it continues to rise, turn off the press and let it cool off to room temperature. Turn the power back on and immediately set the temperature to a low setting like 200°F. Wait for the press to heat up. When the press displays “READY”, monitor the temperature and see if it continues to heat to a level that the OverTemp alarm activates again. If so, contact the factory.

Using Attachments

The main feature that makes the Digital Combo so versatile is the interchangeability of the heat platens. Because the heat platens are modular in their method of connection, one platen can be unplugged and another attached, in its place. These platens are “Hot Swappable”. You do not need to wait for the platens to cool off to remove.

The following instructions apply to the 14x16, 12x14, cap, plate & mug heat platen attachments. All of them disconnect and connect in the same manner.

Removing a Heat Platen

The heat platen can be safely disconnected with the machine on. However, thermal gloves or oven mitts must be used when handling hot heat platens.

- Unplug the modular connector. This is done by unscrewing the safety lock and pulling the connectors apart.
- Lower the heat platen so it rests on the bottom table, and do not clamp it.
- Pull out the quick release pin from the linkage. It is easiest to remove when there is no pressure on the side links or on the heat platen shaft.
- Once the quick release pin is removed, lift the handle away, exposing the heat platen shaft now disconnected from the linkage.
- Lift up on the heat platen slightly, enough to swing it out away from the bottom table. Lower the heat platen down and out of the clamp linkage.



Attaching a heat platen

The heat platen can be safely connected with the machine on. However, thermal gloves or oven mitts must be used when handling hot heat platens.

- Lift the heat platen into the clamp linkage. Make sure the rear guide fork holds onto the guide pin in the back post of the frame. This holds the heat platen in a straight position and keeps it from rotating.



- Reattach the quick release pin through the linkage and the heat platen shaft.




- Reconnect the modular connector. An Err display might read on the controller if in the Normal operating mode. If it does not read a temperature after the heat platen is reconnected, turn the machine off and then on again.



Cap Hold-down Device (For Cap Attachment Only)

There is a curved 1/2-moon cap holddown device for stretching the cap over the curved bottom table.

Simply pull the back strap of the cap behind the pedestal and under the 1/2-moon shaped bracket. This will hold the cap in place for proper printing.

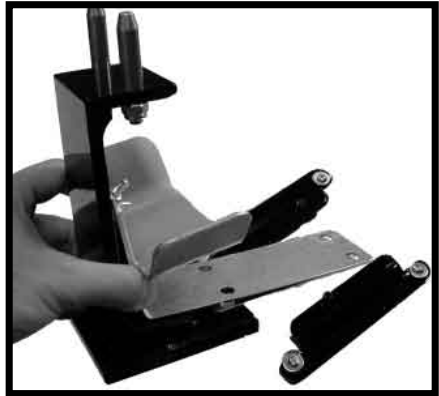

Aligning the Pedestal

The table can be easily adjusted in a straight position if the heat platen does not correctly line up with the pressing surface. The pedestal the table rests on can slide front to back on the base of the machine. Loosen the screw in the gibb plates that holds the pedestal in place in order to adjust its position.

The pedestal can also be slightly rotated in order to align with the upper platen. Loosen all (4) screws holding the gibb plates in place, position/rotate the pedestal to the desired place, and retighten the gibb plates.

Optional Forms / Custom Pedestals

The standard tables included with the DK7 or DK8 will accommodate most items. However there are other sized bottom tables that are instantly interchangeable. For the DK7, there are 3 different curved forms (the top heat platen stays the same). The mid-sized and youth-sized forms are not included with the press. The mid-sized “EURO” form is especially useful for solving wrinkling of caps in the middle area for lower-profile tight-fit caps.



Custom pedestals, bottom tables, and other custom solutions are also available from the factory.

How to use the Cap Attachment

The cap attachment works the same as a cap press. The only difference is that the swing-away style Digital Combo press allows complete access to the cap when the heat platen is swung out, as opposed to typical stand-alone clamshell cap presses. Here are some tips for using the cap attachment:

Make sure the cap holddown device is attached to the bottom pedestal.

Make sure the proper bottom form is used. If wrinkling/folding of the middle of the cap occurs, this is a good indication that the wrong form is being used.

Make sure the lower pedestal is adjusted and slid forward or backward to line up with the heat platen above.



How to use the Mug Attachment

The mug attachment will print one half side of the mug in one pressing cycle. Here are some tips for using the mug attachment:

Use the Additional 1/8" Green Square Pad for smaller 11 oz mugs. Lay the pad on top of the transfer paper, then press.

Wider “steins” and 15oz mugs do not use the extra pad. The heater is sized for larger diameter mugs.

Sublimation transfers can be left on the mug, and the mug can be flipped and pressed on the opposite side for a continuous full wrap-around print.



How to use the Plate Attachment

The plate attachment allows the operator to press down inside a dish or other indented object. Here are some tips for using the plate attachment:

Use the large T-Shirt flat bottom table.

Place the 3-sided aluminum tray on top of the T-Shirt table. This will protect the main T-Shirt silicone pad from being cut into by the plate's bottom edges.



Place the black circular silicone pad on the tray. Center the pad so that it is directly underneath the plate heater block attachment when swung over. Make sure it lines up directly under the plate heat platen. Then peel the backing off the circular black silicone pad and permanently stick it to the tray.

The purpose of the black circular pad is to automatically center the plate under the heat platen. It also provides cushioning when pressing plates.

Set the clamping pressure of the press so the black pad is compressed to 50% its height. Pressing heavier may risk breaking certain fragile style plates.

Lay the 1/8" green circular pad on top of the transfer paper in the plate.

Pressing Ceramic Tile

To press ceramic tile, use the standard T-Shirt heat platen and bottom table. Lay the 1/2" White Nomex Felt padding on top of the black silicone pad. Then lay the transfer paper face-up, and the tile face-down into the image. Press the tile from the back side, firmly. This wraps the transfer paper nicely around the radius of the tile.

Programmable Presets

How Presets Work

There are 70 programmable presets in the controller. The operator can store a Temperature, Time, Prepress Time, and Pressure setting in each preset.

When a preset program is loaded by the operator, the Current Temperature Setting, Time and Prepress Settings (if there is a Prepress setting in that preset) are updated in the normal operating mode.

The pressure is NOT set for the operator mechanically. A brief display of the pressure value in the preset is shown while updating the current settings. This is simply a reference... a reminder of what pressure setting the operator must adjust for that preset.

There are 2 main functions to using the presets. **LOADING** and **EDITING** the preset. **LOADING** a preset simply means selecting a desired preset, and returning to the normal operating mode where the current settings are changed. **EDITING** a preset is when the operator actually changes the preset's settings.

Loading a Preset

To enter the presets, press the PRG key.

SET will display on the screen.

Use the Arrow Keys to select a preset from 00 to 70.

Press PRG to return to the normal operating mode. The current active Temperature, Time & Prepress time settings (if there is a prepress setting in that preset) are now updated with the presets values.



Editing/Programming a Preset

To edit a preset and change it's values to your own desired settings, you simply use the TEMP key while in the SET preset mode.

From the normal operating mode, press the PRG key. SET displays on the screen. Use the Arrow Keys to select the preset # you wish to edit.



Press the TEMP key. The temperature will flash. Use the Arrow Keys to set the temperature for that preset.

Press the TEMP key. The time will flash. Use the Arrow Keys to set the time for that preset.

Press the TEMP key. The Prepress time will flash. Use the Arrow Keys to set the Prepress time. Set the Prepress time to 00 if only one timer is to be used for that preset. Setting Prepress to 00 will disable the Prepress feature.

Press the TEMP key. The Pressure reference value will flash. Use the Arrow Keys to set the pressure for that preset. This will display 0 to 9 for presses configured for Bar Graph Pressure readout, and will display 0:00 to 10:00 for presses configured for a Height Gauge readout.

Press the TEMP key. The screen returns to the preset #. Press PRG to return to the normal operating mode, or use the Arrow Keys to select a different preset and edit that as well.

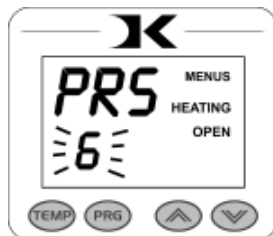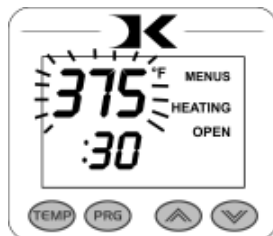

A Walkthrough Tutorial for using Presets

Here is a tutorial of programming 2 different presets, and then an example of using them in normal daily operations. Do this walkthrough to practice using presets.

Part 1: Programming 2 different presets.

From the normal operating mode, press PRG. SET appears.

Use the arrow keys to select SET 01.

Press TEMP. Set the flashing temperature to 400 with the arrow keys.

Press TEMP. Set the flashing time to 45 with the arrow keys.

Press TEMP. Set the flashing Prepress time to 00 with the arrow keys.

Press TEMP. Set the flashing Pressure ref to 6 with the arrow keys.

Press TEMP. Use the arrow keys to select SET 02.

Press TEMP. Set the flashing temperature to 350 with the arrow keys.

Press TEMP. Set the flashing time to 12 with the arrow keys.

Press TEMP. Set the flashing Prepress time to 3 with the arrow keys.

Press TEMP. Set the flashing Pressure ref to 8 with the arrow keys.

Press TEMP. Press PRG to leave the preset mode.

Presets SET 01 and SET 02 have now been programmed.

Part 2: Loading the presets. Let's say we are powering on the machine and starting a job. The first job will need to use preset 01, and later on the next job will need preset 02.

From the normal operating mode, press PRG. SET appears.

Use the arrow keys to select SET 01 then Press PRG. Done!

The press is now set for 400°F and 45 seconds and will start to heat to that temperature. When leaving the presets, the screen briefly displayed PRS 6 - indicating you must manually set the clamping pressure so the bar graph shows 6 (or close to it) at the bottom of the screen.

Now let's change to the next job. Press PRG. SET appears.

Use the arrow keys to select SET 02 then Press PRG. Done!

The press is now set for 350°F, 12 secs, 3 prepress, and you are reminded to set the pressure heavier to 8 on the bar graph display (when closed).

That's it! You can load a preset as often as needed: just press PRG, pick the preset you want with the Arrow Keys, and press PRG again.

User Menus

Entering the user menus & options


There are many useful features beyond simply setting time & temperature, and storing presets. All of these additional features are available to the operator in the User Menu.

To access the user menus, simply press TEMP & PRG at the same time from the normal operating mode and let go.

(Try to use two hands and press the keys at the exact same time. If one key is pressed too early from the other, the temperature setting or preset modes may be activated instead. Turn the press off and then on and try again.)


Fahrenheit / Celsius

The current and set temperature can be displayed in °F or °C. After entering the user menus (see above), use the arrow keys to select F or C. Press PRG to move to the next menu item.

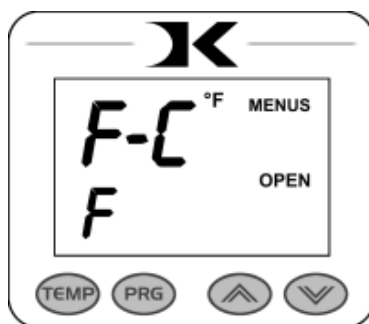

Timer Counter Units

The timer and Prepress timer can be set for mins/secs (default) or hours/mins. If special applications need a higher timer range than 99 mins, 59 secs, this can be changed. After entering the user menus (see top of page), Press PRG until CNT displays. Use the arrow keys to select SEC or HR. Press PRG to move to the next menu item.

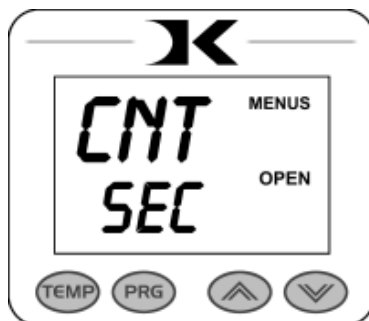

Recorded Pressings (User Odometer)

There is an “odometer” that records pressing cycles done. This can be cleared and reset to 0 at any time when needed. The figure scrolls and it’s beginning and end are separated by a “-” sign.

After entering the user menus (see top of page 18), Press PRG until REC displays. Use the arrow keys to reset the counter to 0. Press PRG to move to the next menu item.



Pressure Minimum

To reset and redefine “0” for the pressure bar graph, use this calibration menu. **Do NOT adjust this setting unless you are sure adjustments are necessary.**

Adjust the pressure of the machine so there is barely any locking pressure when clamping and locking the press. Press either Arrow Key. The press now considers this pressure as “0” on the Pressure Bar Graph Display.

Press PRG to move to the next menu item.




Pressure Maximum

To reset and redefine “9” for the pressure bar graph, use this calibration menu. **Do NOT adjust this setting unless you are sure adjustments are necessary.**

Adjust the pressure of the machine so there is extremely heavy pressure when clamping and locking the press. Press either Arrow Key. The press now considers this pressure as “9” on the Pressure Bar Graph Display.

Press PRG to move to the next menu item.

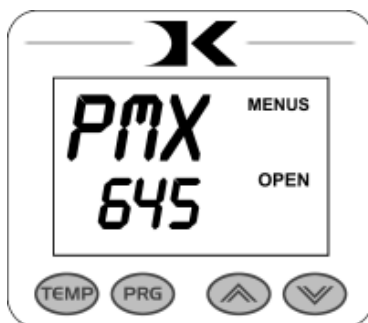

Temperature Drop Sense

The press can be set to alarm if the temperature drops a certain range below the set temperature. This is useful to warn the operator if the press is too far out of temperature range during excessive use.

After entering the user menus (see top of page 18), Press PRG until DRP displays.

Use the arrow keys to set it to OFF (default), or 10, 20, 30, etc.

If the current temperature drops below the set temperature by that many degrees, and alarm will sound. Press TEMP to silence the alarm.

Press PRG to move to the next menu item.



Keypad Beeper

The keypad beep can be silenced if needed. After entering the user menus (see top of page 18), Press PRG until BEP displays. Use the arrow keys to set it to ON or OFF.

Press PRG to move to the next menu item.



Alarms

The timer alarm can be adjusted for different beeping patterns. This can differentiate between multiple presses, and allow the operator to have a short beep or a continuously repeating beep.

After entering the user menus (see top of page 18), Press PRG until ALR displays. Use the arrow keys to set it to OFF, or 1 through 10.



Press PRG to move to the next menu item.


- denotes a short beep.
- _ denotes a longer beep.
- ~ denotes infinite loop.

<u>Alarm #</u>	<u>Alarm Pattern</u>
Off	No alarm
01	•••_
02	•••_~
03	••_
04	••_~
05	•••
06	•••~
07	_~
08	_
09	•
10	• (shorter)

Finished Warning Beep

The press can sound a beep on the last 3 seconds of the timer or Prepress timer countdown. This is useful if the press is automatic and the operator needs a warning that the press is about to finish, open, or pop-up dramatically.

After entering the user menus (see top of page 18), Press PRG until FWB displays. Use the arrow keys to set it to ON or OFF.

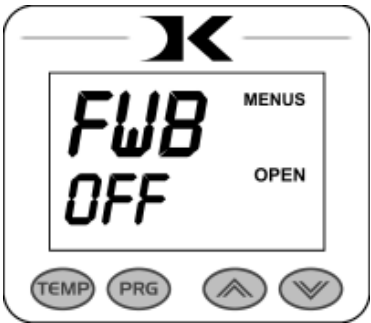


Press PRG to move to the next menu item.

Prepress Timer

The press can cycle back and forth between two distinct timer settings: the normal countdown timer, and a 2nd Prepress timer. (see page 6). This menu item turns the Prepress timer ON or OFF.

After entering the user menus (see top of page 18), Press PRG until PPR displays. Use the arrow keys to set it to ON or OFF.

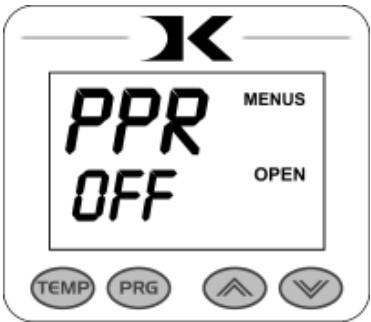

If PPR is set to OFF, pressing PRG will return to the normal operating mode.

If PPR is set to ON, pressing PRG will move to the next menu item.

Prepress Alarms

The Prepress timer alarm can be adjusted for different beeping patterns. This allows for differentiating from the normal timer, and can allow the operator to have a short beep or a continuously repeating beep.

After entering the user menus (see top of page 18), Press PRG until AL2 displays. The PPR menu must be set to ON for this menu to be visible. Use the arrow keys to set AL2 to OFF, or 1 through 10.



Press PRG to move to the next menu item.

- denotes a short beep.
- _ denotes a longer beep.
- ~ denotes infinite loop.

<u>Alarm #</u>	<u>Alarm Pattern</u>
Off	No alarm
01	••• _
02	••• _ ~
03	•• _
04	•• _ ~
05	•••
06	••• ~
07	_ ~
08	_
09	•
10	• (shorter)

Operator Lockout

An operator lockout feature is available to the owner of the press. This prevents the average user from changing any settings or adjusting anything on the controller.

Contact the factory for instructions on using this feature.



Parts / Maintenance / Misc

Interchangeable Tables

The lower table on the machine is interchangeable. Different sized optional tables can be obtained for various materials & handling requirements.

The tables simply fit right onto the bottom pedestal. There are two steel pins that look like “bullets” that fit into the two corresponding holes in the bottom tables. They may be tight from the factory, and can be reamed out to allow for a looser fit and faster change-out.



Custom lower tables and pedestals are available from the factory for specific needs. Tongue-style pedestals with the support at the rear are often requested for pocket/bag loading applications. These “diving-board” anvil style pedestals are especially helpful with hard-to-load applications.

Maintenance

The majority of the press has been designed to be as maintenance free as possible. There are only a few aspects of the machine that should be monitored to insure proper operation.


- The clamp/linkage assembly is the greatest area of wear and friction on the press. The post that connects to the heat platen should be lubricated with SuperLube - a clear high-temperature lubricant.
- If the pins in the clamping mechanism wear, or the holes become elongated, eventually the press will not lock properly. This can be very detrimental to pressing results & quality! Contact the factory for a very inexpensive clamp replacement to get the clamps back to new condition.
- The silicone pad on the lower table can degrade after much use and over an extended period of time. This pad is replaceable. If the pad becomes dried out, cracked, or there are chunks removed from the silicone pad, this can result in inconsistent and poor quality transfers.

Replacement Parts

Here is a list of current replaceable parts on the DC16 Digital Combo as of the writing of this manual:

MEN-DCCLP.....	DC CLAMP ASBLY W/HANDLE & PIN
DKA-CTRLC.....	DIGITAL KNIGHT PROCESSOR BOARD
DKA-CTRLP	DIGITAL KNIGHT POWER BOARD
ELN-KM0227A2	DIGITAL COMBO MEMBRANE KEYPAD
RPK-DKPWR.....	DK POWER INLET/SWITCH/CORD KIT
ELN-VS10N031C.....	TIMER LEVER MICRO SWITCH
DC16-HBA120	DC16 14X16 HEATER BLOCK ASBLY 120V
RPK-DCPSKIT	DC PRESSURE SENSOR KIT
CAN-DKKNOB.....	DK/DC BLACK KNOB
FAS-EM5818	5/8-18 HEX ACORN NUT
MEN-DKPVBLT	DK/DC PIVOT BOLT
FAS-NTA1018	THRUST BEARING (2 req)
MEN-TWB1018	SMALL WASHER THRUST BEARING (4 req)
DCA-1416TBL	DC 14 X 16 DROP-ON TABLE (w/ silicone pad)
SRM-381416.....	3/8 X 14 X 16 SILICON SPONGE
RMN-½NOM1416.....	½" X 14 X 16 WHITE NOMEX/HEAT FELT
DCA-BASE.....	DC BOTTOM BASE W/POST
DKA-PEDESTAL.....	DK/DC PEDESTAL W/ LOC POSTS
DKA-GIBB	DK/DC PEDESTAL SLIDE GIBB (2 req)
MEN-DCCLLR.....	DC STOP COLLAR
SHN-DCCVR	DC TOP CONTROL PANEL COVER
SHN-DC16HBC	DC16 14X16 HEATER BLOCK COVER
DCA-LRGPBSFT	DC LARGE PRESSURE BLOCK & SHAFT
DCA-FEMHRN	DC TOP HEAD FEMALE WIRE HARNESS
DCA-MALEHRN	DC HEAT PLATEN MALE WIRE HARNESS
ELN-MSTB2.5.....	OST 5MM TRMNL THERMOCOUPLE PLUG

Digital Knight Heat Press Wiring Diagram

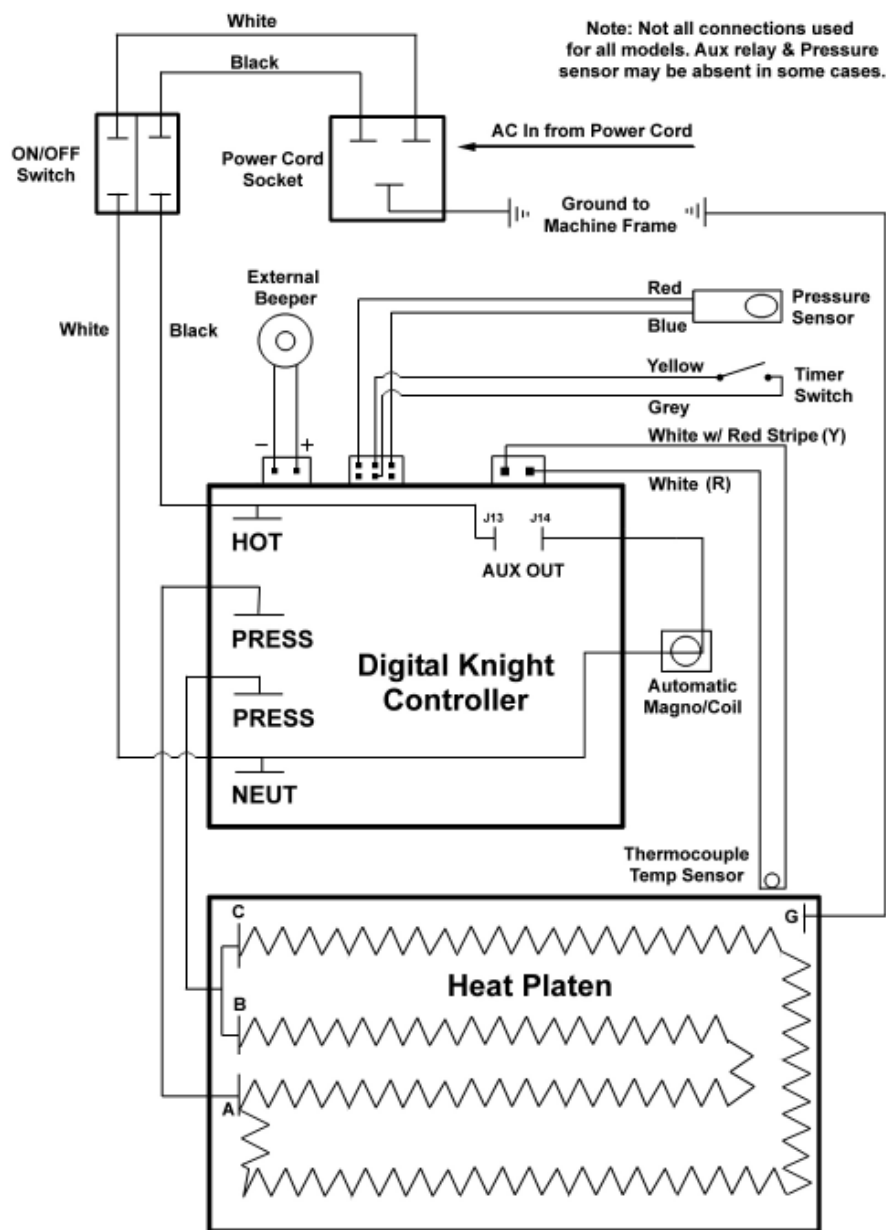

Troubleshooting

The following information attempts to address the most probable mechanical and user issues with the press. Most issues with heat transfer presses are application related. That is, they have to do with the results of a particular transfer application.

For technical support on problems having to do with the final results of a particular transfer paper or media, please contact the supplier of that transfer media. Generally, the machinery manufacturer is unable to support the myriad of different transfer papers, inks and impritable items on the market from other resellers.

Q. The timer does not start when I close the heat platen, or the timer does not reset when I open the press up.

A. There are several probable causes for this. The timer is activated by a micro-switch under the head of the press. It is located on a sheet metal bracket with slots. When the head of the machine is opened, the timer's lever should be depressed and the small contact button under the lever should click in. The timer switch may need to be loosened and moved along the bracket to a position that allows for the heat platen cover to trigger the switch. The wires from the timer switch lead into the head to a black plug plugging into the circuit board. Unplug this plug, and make sure it is plugged back into ALL 6 gold pins on the circuit board.

Q. The control displays **Err** when it first comes on, and I can not set the temperature or use the press.

A. The **Err** message will display if the heating signal from the platen has been cut off, interrupted, or the heating sensor has failed. First check the Lime Green temperature connector that plugs into the digital control. At the top of the controller, there is a green connector that plugs in with 2 small wires. This is the temperature sensor wire. Check to make sure it is properly seated. If after unplugging and plugging the lime green connector the Err message still appears. unplug the green connector and remove the 2 tiny wires from the lime green plug. Cut them back 1/4" and strip them so they have new connections. Reconnect them to the lime green plug so they are screwed in tightly and can not pull out. Plug the green plug back in and turn the press on.

Troubleshooting (cont.)

Q. I press the keys on the keypad, and there is no sound or response from the controller.

A. Check the connection of the keypad to the controller. This is inside the top panel. Unplug the power cord. Remove the two screws in between the clamp/linkage that hold down the top panel, and carefully lift the panel up and look inside at the digital controller. The keypad connector passes in through the top panel. It should wind around the first circuit board and be seated fully into the connector. Check the black keypad connector that plugs into the circuit board to see if it has pulled apart. Also check the area where the keypad connects to the front membrane to see if the leads have been damaged. The membrane keypad may need to be replaced.

Q. The clamp becomes extremely difficult to open and close, and sometimes binds up.

A. First, Loosen all 4 silver bolts holding the clamp on the head to allow the press to re-center during use. Retighten after considerable use. If this does not resolve it, the linkage pins and the posts that connect to the heat platen must be lubricated with a clear, high temperature lubricant. This type of lubricant can be obtained in any auto parts or hardware store. Thoroughly clean the posts that come out of the heat platen, as well as the pins. Relubricate the posts, pins, and all holes & areas in the clamp assembly that receive motion. Then add new lubricant after all moving parts are clean and dry.

Q. The press has shut off, and will not come back on after checking the power cord.

A. Test for power coming from the back side of the power cord inlet socket. Test for power coming from the back side of the on/off switch. Test for power coming to the end of the black & white wires that come from the on/off switch into the control board. This will narrow down which power handling component needs replacement. RPK-DKPWR is a common replacement kit that includes all these components.

Q. I pressed a transfer upside down. The inks and transfer material have burned onto the heat platen.

A. Cool the press down. Using a nonabrasive detergent or cleaner, thoroughly scrub the heat platen surface. Do not use an abrasive scrubber, or a pad that will scratch the Teflon coating of the platen. If you are still unable to remove the transfer material, obtain teflon heater block cleaner from the factory.

Limited Warranty

Geo Knight & Co warrants that the press is free from defects in both material and workmanship One Year from the date of invoice to the buyer. If any parts or workmanship are found to be defective in manufacture, Geo Knight & Co will repair or replace the defective parts or workmanship. In addition, Geo Knight & Co warrants that the Digital Knight heat control is free from defects in both material & workmanship and is covered under no-charge support for (3) years. Geo Knight & Co also warrants that the heating element is warranted for the lifetime of the press, provided it is owned by the original purchaser. This lifetime warranty on the heating element does not cover temperature sensor failure, damage or disconnection. This warranty covers all parts to repair the defects, except when damage results from accident, alteration, misuse or abuse, or when the machine has been improperly installed, or modified in any way. If the press becomes defective during the limited warranty period of one year for the entire press, three years for the control, or the lifetime of the heating element, Geo Knight & Co reserves the right to recall the defective press to the factory for repairs if on site component replacement is deemed not possible by Geo Knight & Co. A return authorization must be granted by Geo Knight & Co prior to its return.

If a press covered by the one year limited warranty must be returned to the factory for repairs, Geo Knight & Co shall make every effort to repair buyer's press. However, Geo Knight & Co reserves the exclusive right to determine whether to repair or replace a defective press. If Geo Knight & Co authorizes a replacement press, the warranty of the replacement press shall expire on the anniversary date of the original machine's invoice to the buyer.

There are no warranties which extend beyond the description on the face hereof. Seller disclaims any implied warranty of merchantability and/or any implied warranty of fitness for a particular purpose, and buyer agrees that the goods are sold "as is". Geo Knight & Co does not warrant that the functions of the press will meet the buyers requirements or expectations. The entire risk as to use, quality and performance of the press lies with the buyer. In no event will Geo Knight & Co be liable for any damages, including loss of profits, destruction of goods or any other special, incidental, consequential or indirect damages arising from the use of the press or accompanying materials. This limitation will apply even if Geo Knight & Co or its authorized agent has been advised of the possibility of such damage.

Geo Knight & Co Inc
52 Perkins St, Brockton MA 02302 USA
(508)588-0186 - Fax (508) 587-5108
info@heatpress.com - www.heatpress.com